

# Installation and operating instructions JUDO JUKO-LongLife

Domestic water station  $\frac{3}{4}$ " - 2"

Valid for: EU countries and Switzerland

Language: English

---

## Attention:

Carefully read through the installation and operating instructions and safety information before installing and putting the unit into service.

These instructions must always be issued to the owner/user.

---

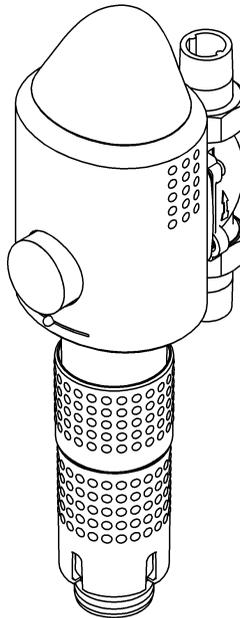


Fig.: JUKO-LF  $\frac{3}{4}$ " -  $\frac{1}{4}$ "

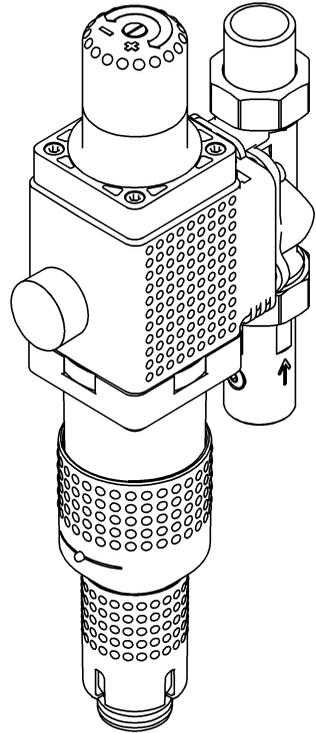


Fig.: JUKO-LF  $1\frac{1}{2}$ " - 2"



---

**Inquiries, orders, customer support**

JUDO Wasseraufbereitung GmbH  
P.O. Box 380  
71351 Winnenden  
Germany  
e-mail: info@judo.eu  
judo.eu

**Address**

JUDO Wasseraufbereitung GmbH  
Hohreuschstraße 39 - 41  
71364 Winnenden  
Germany

**Dear customer,**

**thank you for the confidence you have shown in us by purchasing this unit. With this domestic water station you have purchased a state of the art unit.**

**This domestic water station is suitable for use in cold drinking water up to a maximum ambient temperature of 30 °C (86 °F).**

**This domestic water station is used in drinking water installations for filtering and reducing the pressure of drinking water.**

**Each unit is thoroughly checked before delivery. Should difficulties occur, please contact the responsible customer service. See back page.**

Trademarks:

Trademarks used in this document are protected and registered trademarks of the respective holder.

© JUDO Wasseraufbereitung GmbH  
71364 Winnenden  
Germany

All rights reserved.

Reprints – even of extracts – is only permitted with special approval.

**Table of contents**

**1. About this instruction manual..... 3**

1.1 Symbols used ..... 4

1.2 Safety information and dangers due to non-compliance ..... 4

1.3 Units used..... 4

**2. Intended use ..... 5**

2.1 Water pressure ..... 5

2.2 Instructions concerning specific dangers..... 5

**3. Product information ..... 6**

3.1 Intended purpose..... 6

3.2 Test marks..... 6

3.3 Materials used ..... 6

**4. Installation ..... 7**

4.1 General..... 7

4.2 Discharging the backwashing water ..... 9

**5. Operation ..... 11**

5.1 Commissioning ..... 11

5.2 Pressure setting..... 11

5.3 Functional description..... 12

5.4 Backwashing ..... 13

5.5 Modifications / changes / spare parts..... 14

5.6 Stoppages ..... 14

**6. Faults ..... 15**

**7. Maintenance..... 16**

7.1 Cleaning ..... 16

**8. Warranty and services ..... 16**

**9. Data sheet ..... 17**

9.1 Type..... 17

9.2 Models ..... 17

9.3 Technical specifications..... 17

9.4 Installation dimensions ¾" - 1¼" 18

9.5 Installation dimensions 1½" - 2" 19

9.6 Scope of supply ..... 19

9.7 Accessories ..... 19

**10. Spare parts..... 20**

10.1 JUKO-LF ¾" - 1¼" ..... 20

10.2 JUKO-LF 1½" - 2" ..... 22

**11. Customer support ..... 24**

**1. About this instruction manual**



(see chapter "Safety information and dangers due to non-compliance")

The instruction manual must be permanently available at the place in which the domestic water station is used.

This instruction manual is intended to make it easier to familiarize yourself with the domestic water station and its possible intended uses.

The instruction manual contains important information in order to safely, properly and economically run the domestic water station.

It contains fundamental information, which must be observed during installation, operation and maintenance. Observance of this information helps to avoid dangers, reduce repair costs and increase the reliability and service life of the domestic water station.

The instruction manual must be read and used by each person entrusted with carrying out work on the domestic water station, for example:

- **Installation**
- **Operation**
- **Maintenance**  
(servicing, inspection, repair)

Installation and maintenance may only be carried out by personnel authorized by the manufacturer, who are capable of fulfilling the instructions given in the installation and operating instructions and the country-specific regulations.




Apart from the instruction manual and the legally binding accident prevention provisions applicable in the country and place of use, the recognized technical regulations for safe and proper work must also be observed.

Therefore, this instruction manual must always be read by the fitter and responsible skilled personnel/owner or operator before installation, commissioning and maintenance.

**Not only the general safety notes given in the chapter “Intended Use” are to be observed, but also the special safety notes inserted under the other main items.**

### 1.1 Symbols used

The safety notes contained in this instruction manual are labelled with the following symbols:



Notes directly attached to the domestic water station, e.g.

- Direction of flow (see fig. 1)
- Rating plate
- Cleaning information

must always be observed and kept in a fully legible condition.

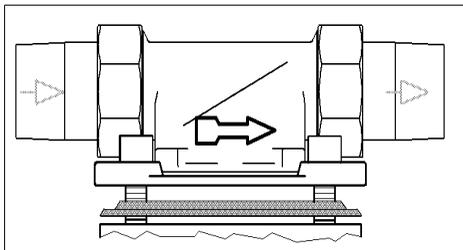


Fig. 1: Built-in rotary flange

### 1.2 Safety information and dangers due to non-compliance

In detail, failure to observe the general danger symbols can result, for example, in the following risks:

- Failure of important functions of the domestic water station.
- Danger to persons due to electrical and mechanical effects.
- Danger to persons and the environment due to leaks.

Refrain from any unsafe working methods.

Failure to comply with this instruction manual and the safety information can not only result in dangers for people but can also harm the environment and the unit.

### 1.3 Units used

In derogation of the International System of Units SI (Système International d’Unités), the following units are used:

Units	Conversion
°F	°F = 9/5°C + 32
bar	1 bar = 10 <sup>5</sup> Pa = 0.1 N/mm <sup>2</sup>
¾"	DN 20
1"	DN 25
1¼"	DN 32
1½"	DN 40
2"	DN 50

## 2. Intended use

Installation and use of the domestic water station are each subject to the applicable national regulations.

In addition to the operating instructions and the obliging regulations concerning accident prevention that exist in the country of operation and the location of use, the established technical regulations concerning safe and professional work, should also be observed.

**The water which is to be treated should fulfil the requirements stipulated by European drinking water directives!**

It is absolutely essential that the manufacturer / supplier will be consulted prior to any operation of the device using water of a different quality, respectively with water that contains additives.

This domestic water station is suitable for use in cold drinking water up to maximum ambient temperature of 30 °C (86 °F).

It is produced to state of the art standards and the generally accepted safety regulations in Germany.

The domestic water station may only be used as described in the instruction manual. Any other or further use is deemed not to be intended use.

Additional dangers exist in case of non-intended use and failure to observe the danger symbols and safety information. The manufacturer/supplier are not liable for any losses or damage resulting from this. The risk is solely borne by the user.

Intended use also includes observing the instruction manual.

The manufacturer/supplier must always be consulted before using the domestic water station outside the use limitations given in the instruction manual.

The domestic water stations are only to be used in a technically perfect condition, for their intended use, safely and aware of the dangers and with full observance of the instruction manual!

**Have any malfunctions corrected immediately!**

### 2.1 Water pressure

Nominal pressure (PN)	16 bar
Operating pressure	1,5 - 16 bar
Discharge pressure	1,5 - 6 bar Factory setting: <b>4 bar</b>

### 2.2 Instructions concerning specific dangers

#### 2.2.1 Electrical equipment / installations



There must not be any electrical cables and devices underneath or in the immediate vicinity of the filter!

Electrical devices / equipment that are not splash-water proof and are situated in the direct vicinity of the domestic water station may be damaged by water leaking from the domestic water station caused as a result of the device not being operated in accordance with the manufacturer's specifications. In addition this may also result in short circuits if these electrical devices / equipment being connected to the electrical power supply. In the event of such cases persons are at risk and may sustain electrical shocks. Therefore any electrical devices / equipment situated in the direct vicinity should be splash-water proof, respectively comply with the statutory requirements for wet areas (IP44).

### 3. Product information

#### 3.1 Intended purpose

This domestic water station is suitable for use in cold drinking water up to a maximum water temperature of 30 °C (86 °F).

This domestic water station is used in drinking water installations for filtering and reducing the pressure of drinking water.



**ATTENTION**

(see chapter “Safety information and dangers due to non-compliance”)

Please refer to the chapter on “Intended Use” for use restrictions.

This domestic water station is used to protect the water pipes and hot water heater against limescale deposits.

This domestic water station removes coarse and fine-grained particles from the water which are larger than or equal in size to the mesh size of the domestic water station.



Particles smaller than the supplied mesh size and impurities causing turbidity cannot be filtered out of the water.

### 3.2 Test marks



Fig. 2: DIN-DVGW mark

The units conform to the technical regulations for drinking water installations in accordance with DIN EN 806 ff. and the national annex DIN 1988 ff. and DIN EN 1717. They are tested by the DVGW (Deutsche Vereinigung des Gas- und Wasserfaches e.V. – technical-scientific association for the gas and water industries) in accordance with the requirements of DIN EN 13443-1, DIN 19628 and DIN EN 1567 pressure stage PN 16 for mechanical filters for use in drinking water and are entitled to bear the DIN-DVGW mark.

### 3.3 Materials used

The materials used are resistant to the physical, chemical, and corrosive loads to be expected in the drinking water and fulfil the requirements specified in DIN EN 13443-1, DIN 19628 (“Mechanical filters in drinking water installations”) and DIN EN 1567 (“Building valves - Water pressure reducing valves and combination water pressure reducing valves”). All materials are hygienically and physiologically safe. Plastics fulfill the official guidelines of the German Federal Environmental Agency as well as the DVGW working sheet W 270. Metallic materials fulfill the requirements of the standard DIN 50930-6 (Impact on the Drinking Water Quality).

## 4. Installation

### 4.1 General



**ATTENTION**



(see chapter “Safety information and dangers due to non-compliance”)

The unit may only be installed by skilled personnel.

The chapter on “Intended use” must always be observed!

The pipes must be able to safely support the domestic water station.

Otherwise mechanical damage or fractures/bursts can occur in the pipes. This can result in major water damage. People close to the domestic water station are exposed to a health risk due to the large quantities of water released. Therefore, if necessary, the pipes must be additionally fixed or supported.

For convenient operation and maintenance it is absolutely necessary to ensure the given spacings (see chapter “Discharging the backwashing water”).

A space of at least 200 mm should be maintained above and below the domestic water station. These distances are necessary to be able to properly carry out the backwashing (see chapter “Backwashing”).

### 4.1.1 Requirements for the place of installation

**The room where the unit is installed must be dry and frost free!**

**Unauthorised persons must not have access to the domestic water station!**



**ATTENTION**



(see chapter “Safety information and dangers due to non-compliance”)

- The ambient temperature must not exceed 30 °C (86 °F)! At higher temperatures or direct sun radiation the material can be damaged and the filter hood can even break.
- In order to be able to safely discharge the wastewater in operation and in case of any defects that occur in the system, precise compliance with the details given in the “Installation” chapter is necessary!
- If the wastewater (backwashing) cannot be safely and completely discharged, the house and installations can be damaged by water.
- A shut-off valve must be installed upstream and downstream of the domestic water station with a bypass to allow continued water supply when the domestic water station is out of service! This enables the water supply to the domestic water station to be interrupted during installation, servicing/maintenance, repairs and in case of malfunctions. Floods and serious water damage to house installations can therefore be avoided.
- The unit can be installed in all standard drinking water pipes.
- It is not permitted to install the domestic water station **upstream** of the water meter!

### 4.1.2 Installed position



(see chapter “Safety information and dangers due to non-compliance”)

Always install the domestic water station in a vertical position ( $\pm 5^\circ$ )!

Failure to observe this can cause uncontrolled backwashing water to escape and can result in water damage.

### 4.1.3 Mounting the built-in rotary flange

Install using the supplied built-in rotary flange. The built-in rotary flange is used as a connecting element between the pipe and the domestic water station.

It is suitable for both horizontal and vertical pipes.

**The built-in rotary flange must be installed in the direction of flow. This is marked by a cast in arrow.**

Failure to comply with this means the domestic water station cannot work.



(see chapter “Safety information and dangers due to non-compliance”)

The flange surface of the built-in rotary flange must be in a vertical position! The built-in rotary flange must be fitted so that mechanical stresses cannot occur! Otherwise mechanical damage can result in the built-in rotary flange. Otherwise mechanical damage can result, the pipe may burst or the built-in rotary flange can break. This can result in major water damage.

In this case, people close to the domestic water station are exposed to a health risk due to the large quantities of water.

Therefore, during installation, ensure that no large forces act on the pipe, built-in rotary flange and domestic water station.

### 4.1.4 Installing the domestic water station

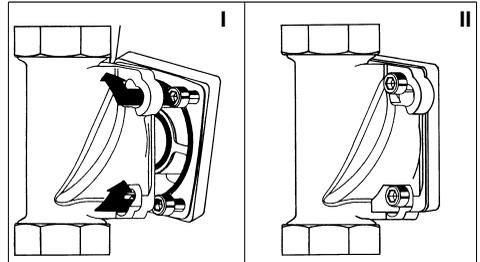


Fig. 3: Built-in rotary flange with bayonet fixture

The built-in rotary flange for the domestic water station is supplied with bayonet drill holes. The necessary seals and screws for this domestic water station have already been mounted.

#### Do not unscrew the screws!

- Insert the four flange screws in the bayonet drill holes on the built-in rotary flange (see fig. 3 I).
- Turn the domestic water station in a clockwise direction as far as it will go (see fig. 3 II).
- Tighten the four flange screws.



Select the torque (approx. 4 Nm) so that the gasket closes and the domestic water station is not damaged or strained!



(see chapter “Safety information and dangers due to non-compliance”)

The section of the profiled flange gasket must point towards the built-in rotary flange. Failure to observe this can lead to leaks and water escaping. This can in turn cause water damage to the house and its installations.

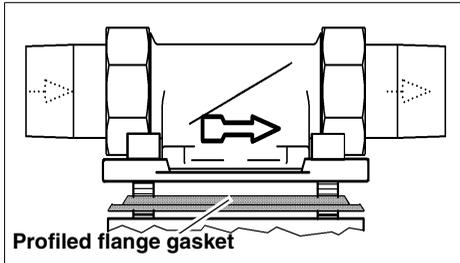


Fig. 4: Built-in rotary flange

## 4.2 Discharging the backwashing water



(see chapter “Safety information and dangers due to non-compliance”)

For the backwashing water a wastewater connection (for example a floor drainage) in accordance with DIN 1986 must be in place. If there is no wastewater connection an appropriately sized bucket can be used.

The dimensioning depends on conditions on site (e.g. wastewater pipe gradient, number of pipe bends, length of the wastewater pipe, etc.). The dimensioning must at least allow all the wastewater to be discharged at the same time. If it is not possible to provide a wastewater connection directly beneath the domestic water station, the flushing water can be fed several metres to the next wastewater connection, either through a hose or a pipe to be fitted to the flushing water valve. This pipe must have the same dimension as the flushing water valve.

In all options, a free discharge must be ensured in accordance with DIN EN 1717.

The following points must be noted if a bucket is used for backwashing:

- If the mains pressure is high, water can splash out of the bucket. In this case, damage to property close to the domestic water station is possible.
- When the bucket is half-filled, the backwashing process must be stopped. Otherwise it is possible for the bucket to overflow. Therefore the bucket must be adequately dimensioned and the backwashing should be carried out quickly.

4.2.1 Backwashing water discharge options

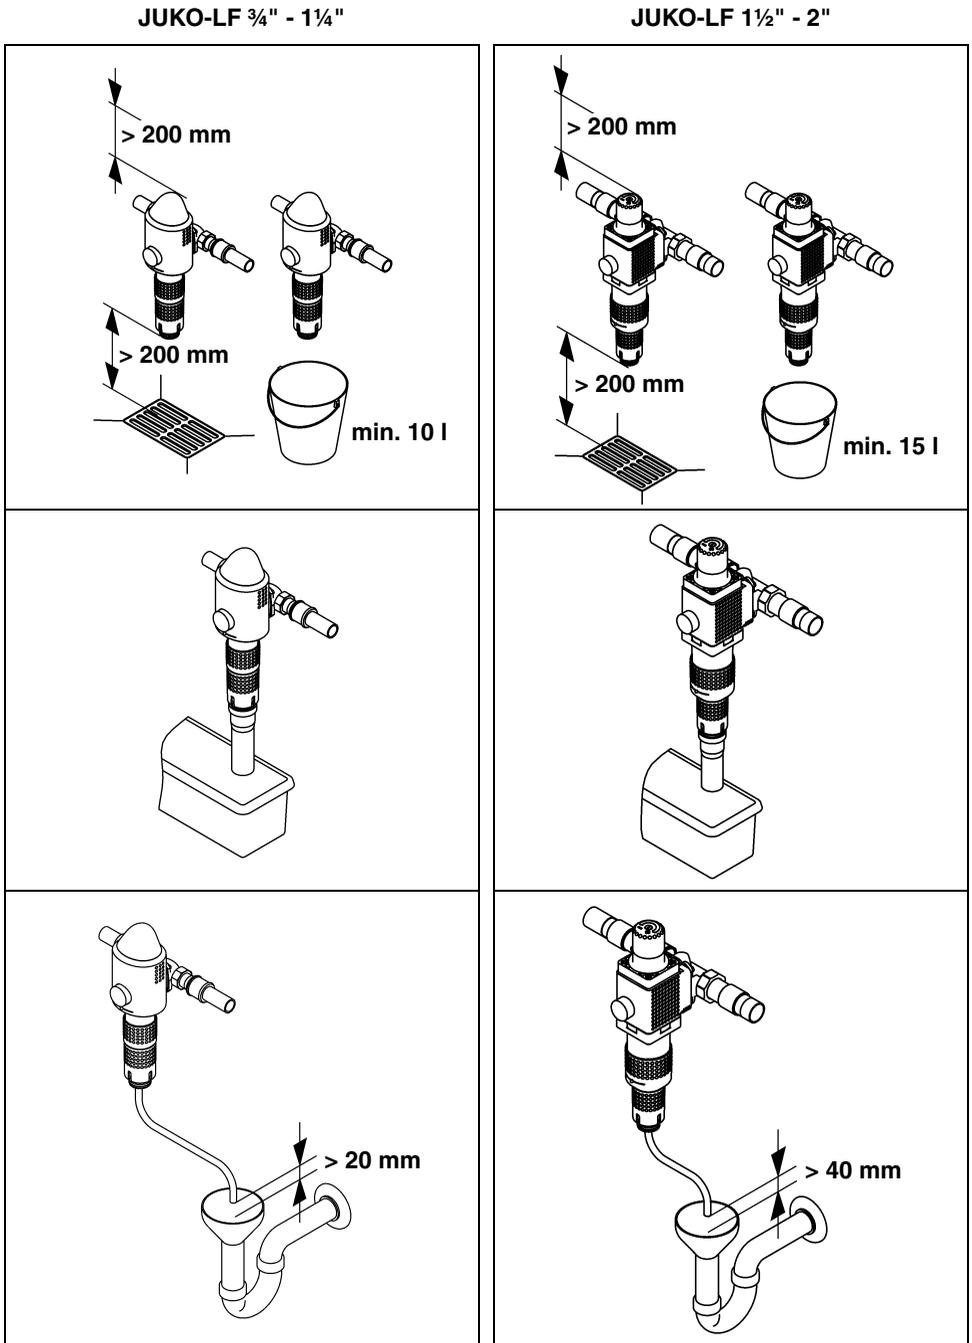


Fig. 5: Backwashing water discharge options

## 5. Operation

**ATTENTION**

(see chapter "Safety information and dangers due to non-compliance")

Always observe the chapter on "Intended use"!

### 5.1 Commissioning

Before starting up (initial putting into service or startup after maintenance work), fill the domestic water station with water and vent!

- To this end, after installation the domestic water station is filled with water by opening the upstream shut-off valve.
- The domestic water station is now at the same pressure as the water system.
- The enclosed air must then be immediately removed from the domestic water station in order to avoid damage to the installation caused by pressure surges. The domestic water station is vented by means of backwashing (see chapter "Discharging the backwashing water").
- After backwashing and venting the domestic water station is ready for use.

### 5.2 Pressure setting

Change the factory-set pressure of 4 bar:

- Remove the pressure reducer cover, in JUKO-LF-A  $\frac{3}{4}$ " -  $1\frac{1}{4}$ ".
- Undo the countersunk screw on the pressure reducer handwheel.
- Turn the handwheel in a clockwise direction = increase pressure.
- Turn the handwheel in an anti-clockwise direction = reduce pressure.
- The pressure can be set within the range 1.5 - 6 bar, depending on the inlet pressure.
- Briefly open an extraction point behind the domestic water station, this relieves the pressure and the set pressure can be read off.
- As soon as the required setting range is reached retighten the countersunk screw on the pressure reducer handwheel.
- Fixing the countersunk screw of the pressure reducer handwheel prevents the setting range from changing by itself.

### 5.3 Functional description

The unfiltered water flows through the built-in rotary flange (1) into the domestic water station. The water flows through the fine filter from the outside inwards. The filtered dirt is retained by the mesh of the fine filter screen. The retained dirt can be seen from

the outside through the transparent filter cover (4). The filter water flows on into the pressure reducer (5). The downstream pressure set can be read off at the manometer (6). The filtered water then leaves the domestic water station through the built-in rotary flange (1).

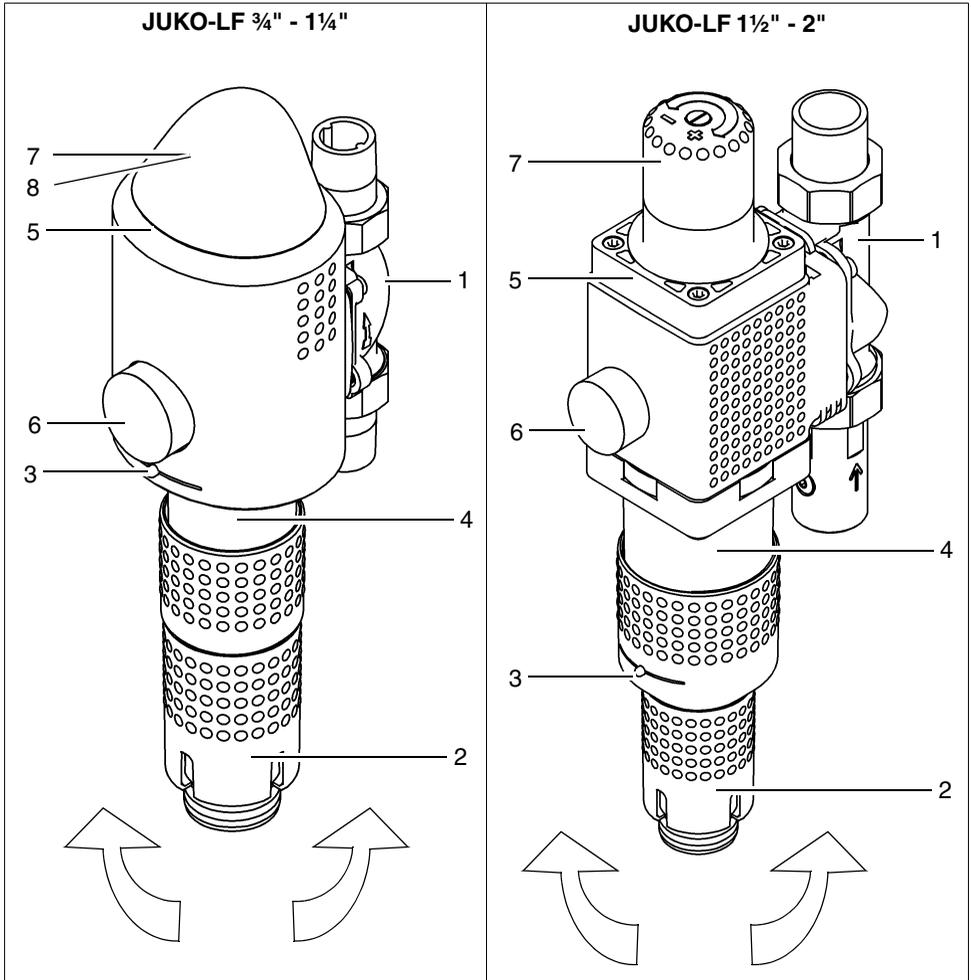


Fig. 6: Functional description

- |   |  |
|---|--|
| <ul style="list-style-type: none"> <li>1 Built-in rotary flange</li> <li>2 Handwheel for free discharge</li> <li>3 Display button</li> <li>4 Filter cover</li> <li>5 Pressure reducer</li> <li>6 Manometer</li> </ul> | <ul style="list-style-type: none"> <li>7 Pressure reducer handwheel</li> <li>8 Pressure reducer cover</li> </ul> <p style="margin-left: 20px;">JUKO-LF 3/4" - 1 1/4"</p> |
|---|--|

**JUKO-LF ¾" - 1¼":**

The filter contains a silver-plated suction pipe unit located at the sieve insert of the protective filter for an optimum prophylactic germ protection. If the prophylactic germ protection shall remain durably, the suction pipe unit has to be replaced after one year by trained personal. The function of the filter, however, is unlimited.

**5.4 Backwashing**

The domestic water station must be backwashed (= cleaned) at the specified cycles in order to remove the filtered dirt from the fine filter screen.



All sizes of domestic water station are backwashed with filtered water. The supply of filtered water to the domestic water station is maintained throughout the backwashing process. Dirty water cannot get into the clean water side during backwashing.

A complete backwashing process is carried out by turning the handwheel through a full turn. At the same time the handwheel ensures free discharge.

When the handwheel is rotated in any direction three suction pipes rotate around the fine filter screen.

At the same time a patented ceramic flushing valve on the underside of the domestic water station opens so that the backwashing water can flow out. The filtered water flows from the inside outwards through the screen into the suction pipe, taking the adhering particles with it. **During this time filtered water flows out.** The fine filter screen is cleaned. At the same time the inside of the transparent filter cover is cleaned together with the wiper lips of the suction pipe.

Immediately continue turning the handwheel until it audibly locks into place.

The ceramic flushing valve thus closes again and the backwashing process is completed.

This backwashing process can be repeated if necessary.



The degree of pollution as well as the cleaning off operation can be watched from outside.

**ATTENTION**

(see chapter "Safety information and dangers due to non-compliance")

This backwashing process must be carried out until the audible locking into place of the handwheel. If the locking process is discontinued before the audible locking into place the ceramic flushing valve is not fully closed.

Water permanently escapes as a result. Apart from high water consumption, this can also cause water damage, especially if the backwashing water is not discharged as described in the chapter "Discharging the backwashing water".

**5.4.1 Backwashing interval**

The domestic water station must be backwashed:

- Every six months at the latest.
- If the water pressure falls.
- If the domestic water station is visibly dirty.



There is a display button attached to the domestic water station. It can be slid along the months scale. This enables the backwashing interval to be monitored.



(see chapter "Safety information and dangers due to non-compliance")

If the interval until the next backwashing is longer than six months, the particles on the filter screen can stick or a large filter pressure resistance can result.

Unauthorized persons must not operate the domestic water station! Persons who operate the domestic water station must observe the operating instructions. Failure to observe these instructions can result in damage to property and personal injuries.

Experience shows that increased dirt is deposited during the initial running period. If so, the unit has to be flushed more often than usual.

Failure to flush in good time can cause damage to the screen. Larger quantities of filtered particles can deform the screen and as an extreme incident cause the tearing of the sieve. As a result a filter function is not any longer ensured. In addition, larger quantities of dirt can cause mechanical impairment concerning the backwashing function.

## 5.5 Modifications / changes / spare parts



(see chapter "Safety information and dangers due to non-compliance")

Only original spare parts are to be used!

Arbitrary modifications and changes are prohibited for safety reasons! They can impair the function of the domestic water station, lead to leaks and as an extreme incident they can lead to the bursting of the domestic water station.

The imprinted test marks are only valid if original spare parts are used.

### 5.5.1 Servicing / Repair

Before carrying out any work on the domestic water station, which extends beyond pure operational control, the domestic water station must be depressurised! Failure to observe this can lead to an uncontrolled escape of water and therefore lead to water damage in the building. Strictly comply with the instructions given in the "Installation" and "Maintenance" chapters.

## 5.6 Stoppages



(see chapter "Safety information and dangers due to non-compliance")

If a domestic water station has to be removed from the flange or unscrewed, the chapter "Intended use" must always be observed!

- Protect the flange surfaces from damage! Damaged flange surfaces cannot close tight any longer. As a result, escaping water can damage the building and installations.
- Ensure that no dirt can get into the domestic water station! This dirt can get in-

to contact with and be discharged into the drinking water when the domestic water station is switched back on. The health of people who drink dirty water is at risk.

- Store the domestic water station in frost-free conditions! Frost can cause any water contained in the domestic water station's voids to freeze and thus cause mechanical damage to the domestic water station so that it leaks at operating pressure or can burst. Leaking water can cause major damage to the building. In addition, people near the domestic water station can be injured by breaking off filter parts.
- When restarting the domestic water station, follow the instructions for a new domestic water station.

## 6. Faults

**The opening of the units and the replacement of the water pressure charged parts may only be effected by authorized personal in order to ensure the unit security and its tightness.**

### Help with faults:

Fault	Cause	Remedy
Backwashing water continues running.	Ceramic flushing valve not fully closed.	Repeat the backwashing and then turn the handwheel until it locks into place!
	Dirt in the ceramic flushing valve.	
Water flow rate falls.	Screen is blocked.	Carry out backwashing!
Leaks in the domestic water station.		Inform the fitter or nearest customer service centre! (The filter cover must be replaced immediately!)
Filter cover becomes turbid.	Filter cover has been exposed to high temperatures or solvents.	
Hairline cracks on the filter hood.		
Downstream pressure slowly rises when no water flowing.	Impermissible increase in pressure due to service water heating.	Check the safety valve of the hot water boiler! Inform the fitter or nearest customer service centre!
	Wear in the pressure reducer cartridge.	

## 7. Maintenance

**ATTENTION**

(see chapter “Safety information and dangers due to non-compliance”)

Always observe the chapter on “Intended use”!

### 7.1 Cleaning

**ATTENTION**

(see chapter “Safety information and dangers due to non-compliance”)

**Use only clear, drinking water concerning the cleaning of the housing and the transparent filter hood.**

Domestic all-purpose cleaners and glass cleaners can contain up to 25 % solvents or alcohol (spirits).

These substances can chemically attack the plastic parts, which can lead to brittleness right up to [brittle] fractures.

**These kinds of cleaners must therefore not be used.**

## 8. Warranty and services

In order to comply with the legal warranty claim, it is necessary that backwashing takes place according to the existing operating conditions (see chapter 5.4.1).

DIN EN 13441-1 specifies that backwashing must take place at least every six months.

However, JUDO recommends to carry out backwashing every two months!

Further, an annual check of the set discharge pressure at the pressure gauge (visual check) when no water is flowing and at the peak flow (large amount drawn off) is necessary.

Regular inspection and routine servicing are indispensable in order to continue to achieve a successful process for many years after the unit is put into service. In the building services sector this is covered by DIN EN 806-5.

A servicing agreement is the best way to ensure a good operating function beyond the warranty period.

Wherever possible, the regular servicing work and supply with consumables and wearing materials, etc. should be carried out by the specialist trade or the factory's customer service department.

## 9. Data sheet

### 9.1 Type

JUDO JUKO-LongLife  
Domestic water station

Abbreviated name: JUKO-LF

### 9.2 Models

Model	Order no.
JUKO-LF ¾"	8170250
JUKO-LF 1"	8170251
JUKO-LF 1¼"	8170252
JUKO-LF 1½"	8170215
JUKO-LF 2"	8170216

### 9.3 Technical specifications

The following applies for all the models of the device:

- Maximum ambient temperature and water temperature: 30 °C (86 °F)
- The water to be filtered must conform to the European Drinking Water Regulations!
- Threaded connection to DIN EN 10226-1

#### Nominal pressure

Model	Operating pressure	Nominal pressure
JUKO-LF ¾" - 2"	1.5 – 16 bar	PN 16

### Weight

Model	Weight
JUKO-LF ¾"	2.9 kg
JUKO-LF 1"	3.1 kg
JUKO-LF 1¼"	3.4 kg
JUKO-LF 1½"	8.1 kg
JUKO-LF 2"	8.6 kg

### Water flow rate

Model	Water flow rate up to
JUKO-LF ¾"	2.3 m³/h
JUKO-LF 1"	3.6 m³/h
JUKO-LF 1¼"	5.8 m³/h
JUKO-LF 1½"	9.1 m³/h
JUKO-LF 2"	14.0 m³/h

### Back-flush volume stream

Model	Back-flush volume stream
JUKO-LF ¾"	0.3 l/s
JUKO-LF 1"	0.3 l/s
JUKO-LF 1¼"	0.3 l/s
JUKO-LF 1½"	0.3 l/s
JUKO-LF 2"	0.3 l/s

The backwashing volumetric flow given applies to 2 - 3 bar mains pressure and for a completely opened flushing water valve.

## 9.4 Installation dimensions $\frac{3}{4}$ " - $1\frac{1}{4}$ "

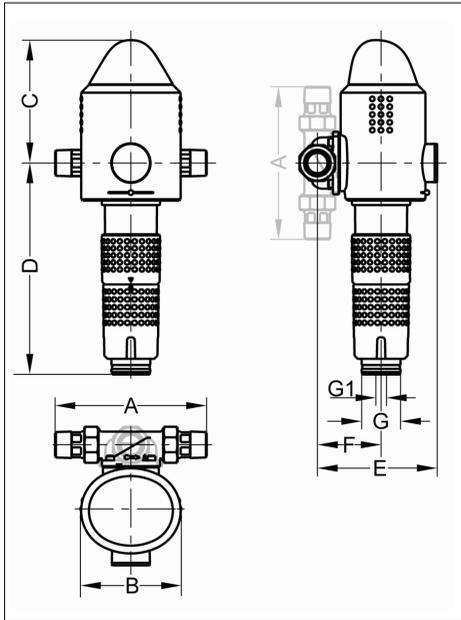


Fig. 7: Installation dimensions  $\frac{3}{4}$ " -  $1\frac{1}{4}$ "

The the built-in rotary flange (JQE) may be mounted in both horizontal and vertical pipes.

Model	A	B	C	D	E	F	G	G1
JUKO-LF $\frac{3}{4}$ "	180	130	158	270	155	82	50	13
JUKO-LF 1"	195	130	158	270	155	82	50	13
JUKO-LF $1\frac{1}{4}$ "	230	130	158	270	160	87	50	13

All dimensions in [mm] (see fig. 7)

A = Fitting length

B = Unit width

C = Height above pipe centre

D = Height below pipe centre

E = Depth to pipe centre

F = Waste water connection centre  
to pipe centre

G = Connection dimension waste water

G1 = Connection dimension waste water  
(alternative)

## 9.5 Installation dimensions 1½" - 2"

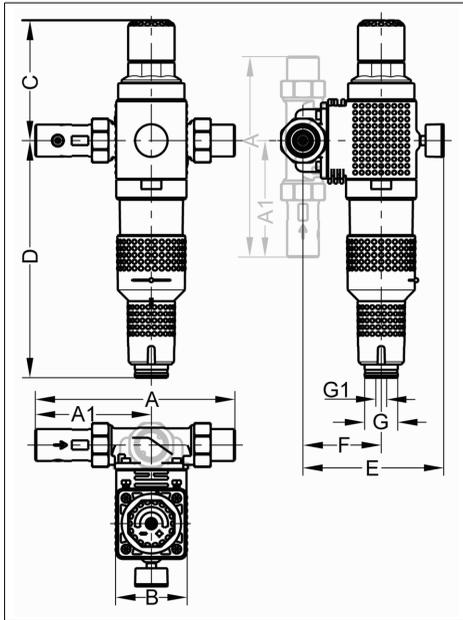


Fig. 8: Installation dimensions 1½" - 2"

The the built-in rotary flange (JQE) may be mounted in both horizontal and vertical pipes.

Model	A	A1	B	C	D	E	F	G	G1
JUKO-LF 1½"	301	175	108	181	356	212	118	50	13
JUKO-LF 2"	335	195	108	181	356	220	126	50	13

All dimensions in [mm] (see fig. 8)

A = Fitting length

A1 = Length on inlet side

B = Unit width

C = Height above pipe centre

D = Height below pipe centre

E = Depth to pipe centre

F = Waste water connection centre  
to pipe centre

G = Connection dimension waste water

G1 = Connection dimension waste water  
(alternative)

## 9.6 Scope of supply

- Pre-installed domestic water station
- Installation and operating instructions

### JUKO-LF ¾" - 1¼":

- 1 x Built-in rotary flange JQE ¾", 1" or 1¼" with bayonet fixture and screw connection

### JUKO-LF 1½" - 2":


- 1 x Built-in rotary flange JQE 1½" or 2" with bayonet fixture and screw connection

## 9.7 Accessories

- JUDO JQR expansion QUICKSET (order no. 8250041) for the series connection of two devices, e.g. filter and water treatment system.
- JUDO Automatic controls JAUS (order no. 8170244) for subsequent upgrade of the manual domestic water station to an automatic domestic water station.

## 10. Spare parts

### 10.1 JUKO-LF 3/4" - 1 1/4"

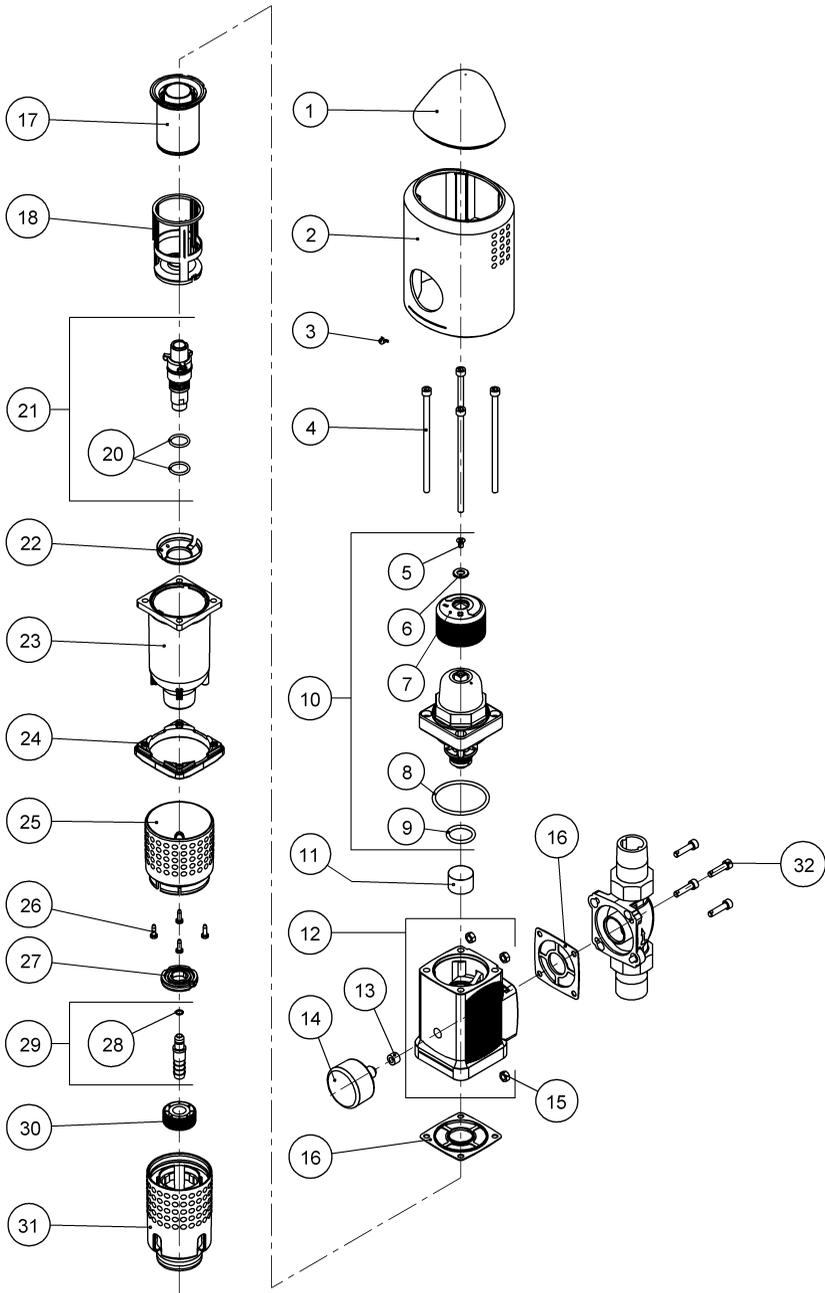


## List of spare parts JUKO-LF ¾" - 1¼"

Item	Designation (Recommended average replacement interval for wearing parts [*])	Piece(s)	Order no.	VE <sup>1)</sup> /Piece
1	Cover pressure reducer	1	1120542	15
2	Cover housing JUKO-LF ¾"	1	2170198	55
2	Cover housing JUKO-LF 1"	1	2170246	55
2	Cover housing JUKO-LF 1¼"	1	2170200	55
3	Display button	1	1120424	2
4	Cylinder screw M6x130	4	1650134	6
5	Countersunk screw M5x8	1	1650307	1
6	Disc A 8.4	1	1607125	1
7	Handweel pressure reducer	1	1120196	9
8	O-ring 52 x 3.5	1	1200113	7
9	O-ring 25 x 3.5	1	1200114	4
10	Pressure reducer cartridges	****	2150026	105
11	Noise screen	1	1400071	6
12	Cover housing pre-mounted	1	2150054	98
13	Manometer seal	1	1200117	3
14	Manometer 0-10 bar	1	1610390	20
15	Hexagon nut M6	4	1633145	1
16	Profile flange seal	****	1200218	5
17	Strainer	****	2070302	70
18	Suction pipe silver plated	*	2070349	38
20	O-ring 18 x 2.5	****	1200291	2
21	Flushing valve pre-mounted	1	2170179	75
22	Suction pipe base	1	1120533	7
23	Filter bell	1	1120536	135
24	Flange	1	1420013	20
25	Cover of filter bell	1	1120541	31
26	Lens metal screw 3.9 x 13	4	1650289	1
27	Spacer disc	1	1120478	3
28	O-ring 6.07 x 1.3	1	1200137	2
29	Tube connection pre-mounted	1	2170182	10
30	Union nut	1	1120214	4
31	Handwheel for free discharge	1	1120461	36
32	Cylinder screw M6 x 25, coated	4	2010199	2

1) VE = Unit of billing

Replacement interval: \* = 1 year, \*\*\*\* = 4 years

## 10.2 JUKO-LF 1½" - 2"

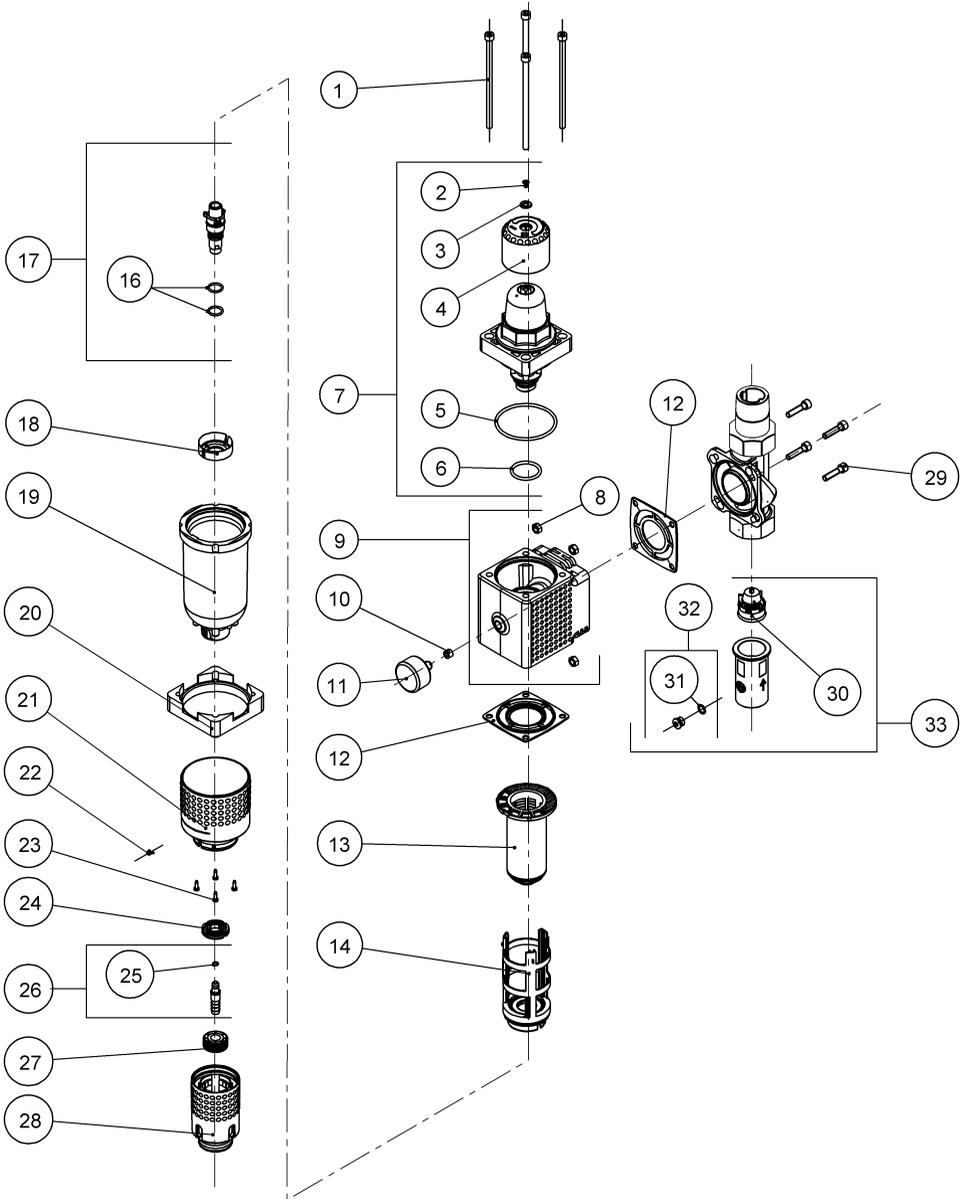

## List of spare parts JUKO-LF 1½" - 2"

Item	Designation (Recommended average replacement interval for wearing parts [*])	Piece(s)	Order no.	VE <sup>1)</sup> /Piece
1	Cylinder screw M8x160	4	1650290	8
2	Countersunk screw M5x8	1	1650307	1
3	Disc A 8.4	1	1607125	1
4	Pressure reducer handwheel	1	1120472	12
5	O-ring 84 x 4	1	1200201	8
6	O-ring 38 x 4	1	1612131	6
7	Pressure reducer cartridge	**** 1	2170189	220
8	Hexagon nut M8	4	1607117	2
9	Pre-fitted basic housing JUKO-LF 1½"	1	2170248	169
9	Pre-fitted basic housing JUKO-LF 2"	1	2170249	169
10	Manometer seal	1	1200117	3
11	Manometer 0 - 10 bar	1	1610390	20
12	Profile flange seal	**** 2	1200230	9
13	Strainer	**** 1	2070304	168
14	Pre-fitted suction pipe	**** 1	2170178	78
16	O-ring 18 x 2.5	**** 2	1200291	2
17	Pre-fitted flushing valve	1	2170179	75
18	Suction pipe base	1	1120464	6
19	Filter bell	1	1120459	212
20	Flange	1	1430099	41
21	Cover of filter bell	1	2170165	31
22	Display button	1	1120424	2
23	Lens metal screw 3.9 x 13	4	1650289	1
24	Spacer disc	1	1120478	3
25	O-ring 6.07 x 1.3	1	1200137	2
26	Pre-fitted hose connector	1	2170182	10
27	Union nut	1	1120214	4
28	Handwheel for free discharge	1	1120461	36
29	Cylinder screw M8 x 35, coated	4	1650291	3
30	Backflow preventer JUKO-LF 1½"	1	1610318	44
30	Backflow preventer JUKO-LF 2"	1	1610454	51
31	O-ring 11 x 2	1	1200297	2
32	Complete plug pre-mounted	1	2170184	8
33	Pre-fitted RV sleeve JUKO-LF 1½"	1	2170180	88
33	Pre-fitted RV sleeve JUKO-LF 2"	1	2170181	98

1) VE = Unit of billing

Replacement interval: \*\*\*\* = 4 years

## 11. Customer support



### JUDO Wasseraufbereitung GmbH

Postfach 380 • D-71351 Winnenden

Tel. +49 (0)7195 / 692-0

e-mail: info@judo.eu • judo.eu



### JUDO Wasseraufbereitung GmbH • Niederlassung Österreich

Zur Schleuse 5 • A-2000 Stockerau

Tel. +43 (0)22 66 / 6 40 78 • Fax +43 (0)22 66 / 6 40 79

e-mail: info@judo-online.at • judo-online.at



### JUDO Wasseraufbereitung AG

Industriestrasse 15 • CH-4410 Liestal

Tel. +41 (0)61 906 40 50 • Fax +41 (0)61 906 40 59

e-mail: info@judo-online.ch • judo-online.ch



### JUDO Wasseraufbereitung GmbH • Filiaal-Filiale BeNeLux

Laarbeeklaan-Av. du Laerbeek, 72 A1 • B-1090 Brussel-Bruxelles

Tel./Tél. +32 (0)24 60 12 88 • Fax +32 (0)24 61 18 85

e-mail: info.benelux@judo.eu • judo.eu



### JUDO France S.à.r.L

76 Rue de la Plaine des Bouchers (Technosud) • F-67100 Strasbourg

Tel. +33 (0)3 88 65 93 94 • Fax +33 (0)3 88 65 98 49

e-mail : info@judo.fr • judo.fr

Installed by:

<p><b>JUDO BIostat-COMBIMAT</b> The anti-lime protection and hygiene unit to be used in domestic water installations. Stops lime - without replacing the cartridge - and fights germs.</p>	<p><b>JUDO ZEWa-WATERSTOP</b> Central water safety fitting. Stops water flow in the event of water pipe bursts and detects leaks.</p>	<p><b>JUDO HEIFI-KOM</b> Combination of the heating backwashing filter and automatic heating feed station for fulfilment of DIN EN 1717.</p>
<p><b>JUDO HEIFI-TOP</b> Backwash protective filter to be used in the heating-circuit in a one-family or multi-family dwelling. Removes sludge and enclosed gases.</p>	<p><b>JUDO JULIA</b> Metering pump for JUL mineral solution against corrosion (brown water) and lime deposits.</p>	<p><b>i-soft TGA 2</b> The world's first automatic, intelligent water softener.</p>

All illustrations, dimensions and information for the different models are those valid on the date of printing. All rights are reserved for modifications as a result of technical progress or further developments. Claims with regard to models or products are excluded.